
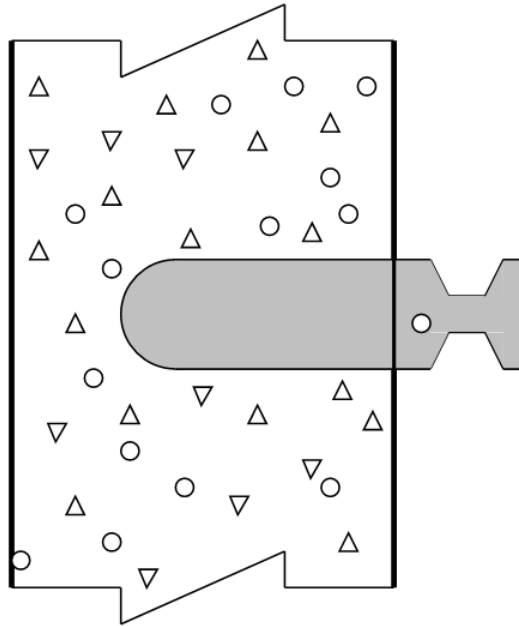


LANE TECH SHEET

DRY CAST SIZING PINS

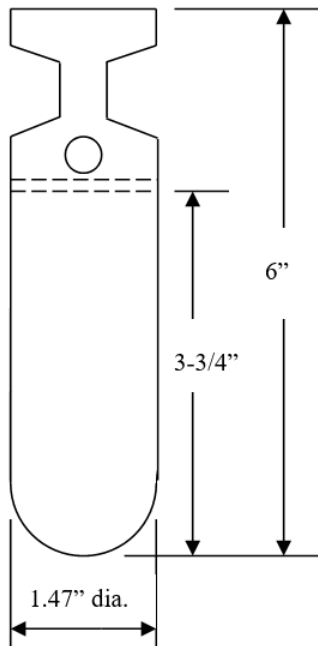

INSTALLATION INSTRUCTIONS

- Lift holes in the dry cast manholes are formed after the 1-1/2" dia. steel hole forming pins are hydraulically or mechanically retracted. To ensure proper sizing of the lift holes during the curing process, insert the dry cast sizing pins into the preformed 1-1/2" dia. lift hole. Make sure the insertion ring is flush with the outside wall of the manhole.
- We recommend removing the pins prior to the initial set of the concrete.
- Once the concrete has cured to at least a 3,000 PSI compression strength, the EZ Lift Pins can be driven in with a 6 – 8 lb. sledge hammer.



Drawing: 1
Scale: None

Dry Cast Sizing
Pins for EZ Lift
Pins

LANE INTERNATIONAL
CORPORATION

P.O. Box 925 * Tualatin, OR 98062
503-692-9860 * www.laneinternational.com