


# LANE TECH SHEET

## Threaded Insert Holder

The Lane Threaded Insert Holder was designed to allow for easy installation of the Threaded Insert in both wet and dry cast operations from outside the jacket.

### INSTRUCTIONS:

1. Installation requires drilling a 2-1/2" dia. hole in the jacket. Simply weld the machined bushing centered over the drilled hole with the handle at the 5 o'clock position.
2. Screw the Threaded Insert on to the Insert Holder and slide through the bushing. Rotate the handle and lock into place.
3. To remove the Insert Holder, simply lift up on the handle and unscrew.

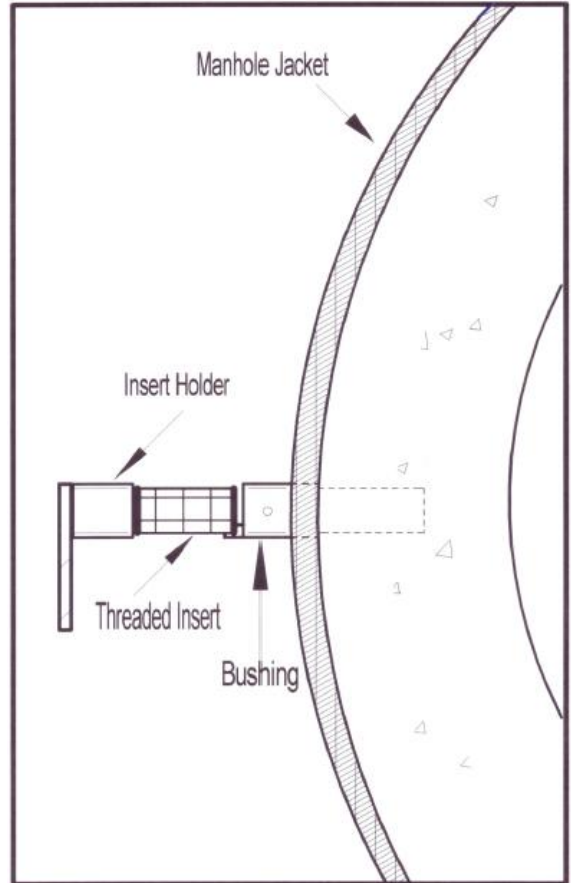

Drawing: 1  
Scale: None

Threaded Insert  
Holder  
Part # TIH-4000

**LANE** INTERNATIONAL  
CORPORATION

P.O. Box 925 \* Tualatin, OR 98062  
503-692-9860 \* [www.laneinternational.com](http://www.laneinternational.com)