


# LANE TECH SHEET

## Wet Cast Forming Pins



### INSTALLATION INSTRUCTIONS

- Drill two 1-1/2" dia. holes in the wall of the form directly apart from each other. Tack weld steel bushing to outside of form and insert pin.
- Simply tap the pin's handle to rotate and remove. Keep the pin clean to assure consistent hole sizes.
- Once the concrete has cured to at least a 3,000 PSI compression strength, the EZ Lift Pins can be driven in with a 6 – 8 lb. sledge hammer.

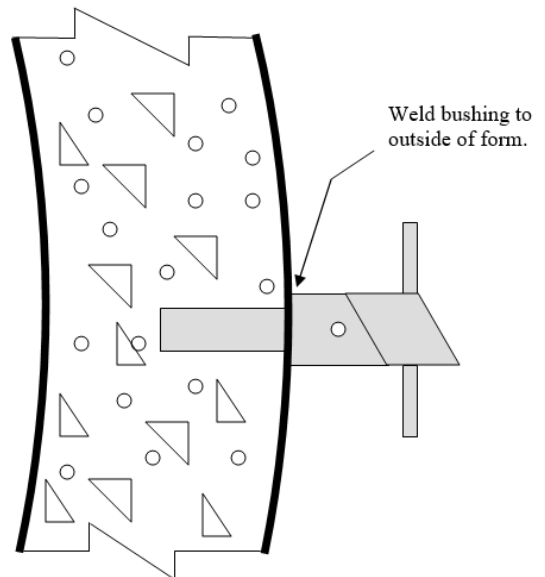

Drawing: 1  
Scale: None

Wet Cast Forming  
Pins for EZ Lift Pins  
**Part # EWP-1**

**LANE** INTERNATIONAL  
CORPORATION

P.O. Box 925 \* Tualatin, OR 98062  
503-692-9860 \* [www.laneinternational.com](http://www.laneinternational.com)